POWER FEED CORD

STRAIN RELIEF



RISK OF ELECTRICAL SHOCK. BEFORE INSTALLATION OR **DISCONNECT POWER** 



**INSTRUCTIONS &** FAILURE TO COMPLY TO



REINFORCED TO SUPPORT CEILING TO BE PROPERLY


WEIGHT OF THE FIXTURE.

ON FLOOR & LIFT TO CEILING. DO NOT CONSTRUCT ROW COULD VOID PRODUCT FORMENTIONED WARNINGS

ယ

SIDE ALIGNER

JOINER SPLINE

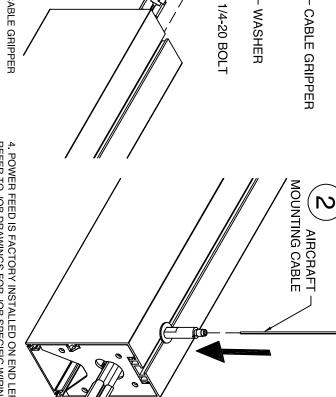

LENS

SIDE ALIGNER


SPLINE JOINER Θ

1. INSTALL ADJUSTABLE CABLE GRIPPER

POSITION AND FEED A/C CABLE THROUGH CABLE SUPPLIED WITH MOUNTING KIT. LIFT FIXTURE INTO LOCATIONS ACCORDING TO INSTRUCTIONS 2. HANG FIXTURE. INSTALL A/C CABLE IN MOUNTING GRIPPER. TIGHTEN CABLE GRIPPER IN POSITION

FIXTURE USING SUPPLIED HARDWARE, SIDE FIXTURES, DO NOT MIX LENSES. 3. HANG NEXT FIXTURE. REMOVE LENSES FROM JOINING FIXTURES UNTIL ROW IS COMPLETE. ALIGNERS AND SPLINE. CONTINUE HANGING AND HARNESS ENDS AND JOIN TO ALREADY HUNG CONNECT







COMPLETED JOINT

Lighting Without Limits